

- 5 Review the edited movie.**
- Choose [] to play the edited movie.
 - To edit the movie again, repeat step 4.
 - To cancel editing, press MENU button.



- 6 Save the edited movie.**
- Choose [] and then [New file].
 - Choose [Save w/o comp.].
 - The movie is now saved as a new file.



- To overwrite the original movie with the cut one, choose [Overwrite] in step 6. In this case, the original movie will be erased.
- If the memory card lacks sufficient space, only [Overwrite] will be available.
- Movies may not be saved if the battery pack runs out while saving is in progress.
- When editing movies, you should use a fully charged battery pack.


Extracting Frames of 4K Movies as Stills



- You can save a frame of a movie as a still image by choosing [Still] the movie control panel in step 3 of "Removing the Beginning/End of Movies" (79).

Reducing File Sizes

Movie file sizes can be reduced by compressing movies as follows.

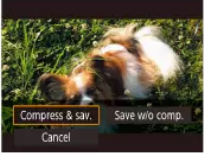

- On the screen in step 4 of "Removing the Beginning/End of Movies" (79), choose [] and then choose [New file].
- Choose [Compress & sav.].

Before Compression After Compression			
4K 29.97P	FHD 59.94P	FHD 29.97P	FHD 29.97P
4K 25.00P	FHD 50.00P	FHD 25.00P	FHD 25.00P
Hd 59.94P		Hd 29.97P	
Hd 50.00P		Hd 25.00P	



- Edited movies cannot be saved in compressed format when you choose [Overwrite].

Before Use

Basic Guide

Advanced Use

Camera

Auto Hybrid

Other

P Movie

Tv, A

Play

Wireless

Settings

Accessories

Appendix

Index

