


When CDs were released, they were advertised as "indestructible." No one will believe that any more. While you can buy commercial CD repair kits to fix these fragile objects, it turns out there's an easier way. Squeeze that tube of toothpaste and let's get started.

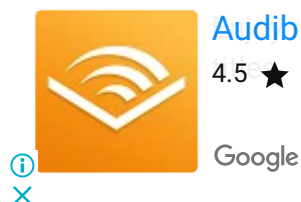

Part One of Two: Getting Started



- 1 Check both sides for damage.** A CD stores information just beneath the label. A scratch that tears through the label usually destroys the CD permanently. Fortunately, scratches are more common on the reflected side, and that's where toothpaste comes in handy. The laser that reads the CD needs to bounce evenly off the smooth, reflective surface.^[1] Toothpaste is just abrasive enough to wear down scratched areas to a smoother surface.

repair services can repair the disc with a special burning machine, but these are hard to use without causing damage.



2 Wash the CD with a damp, lint-free cloth. Even if you can't see them, tiny flecks of dust on the CD could gouge out new scratches when rubbed with the toothpaste. To prevent this, hold the disc under cool, running water and rub it with a lint-free cloth such as cotton or microfiber. Always rub directly from the center to the edge, never in small, circular motions or along the circular pathways. Only wash the reflective side of the disc.

- If the CD is very dusty, gently spray it with canned air first.
- If the CD is visibly greasy, use rubbing alcohol or a CD cleaning solution instead of water.



3 Choose your toothpaste. Only an actual "paste" will work, not a gel.^[2] If convenient, choose a "whitening" or "tartar control" toothpaste. These tend to be more abrasive, which will help polish the CD.

- You might be able to look up your toothpaste brand online to find the "RDA," a measure of abrasiveness.^[3] A high RDA toothpaste usually makes a smoother surface, although that's not always true.^[4]



Advertisement

Polishing the CD with Toothpaste



- 1 Squirt the toothpaste onto a lint-free cloth.** As before, a clean rag made from cotton or microfiber is ideal. You can use a cotton swab instead.



2 נגב בעדינות את האזור השרוט. לשפשף את משחת השיניים על פני השטח שרוט. תמיד לעבור מהמרכז ישירות לקצה. תנועה חוזרת תהיה לאט לאט למטה את התקליטור, להחליק את זה עד לרמה של שריטה. אל תלחץ חזק



3 לשטוף את משחת השיניים. החזק את התקליטור מתחת למים זורמים. נגבו אותו במטלית נקייה באותו כיוון תנועה.



4 יבש את התקליטור. היזהר, כמו תקליטור יבש הוא שרוט בקלות רבה יותר מאשר רטוב אחד. כתם את רוב המים תחילה, תוך הנחת מטלית נטולת מוך ישירות על גבי התקליטור והרמתם. סיים על ידי ייבוש האוויר או שפשוף עדין מאוד עם שטח יבש של הבד. כמו תמיד, לשפשוף מהמרכז לקצה בקווים ישרים.



- 5** **נסה מחוספסים חזקים יותר.** בדוק את תקליטור פעם זה יבש לחלוטין. אם זה עדיין לא עובד, אתה יכול לנסות את אותו תהליך ניקוי עם פולנית המיועדת כסף, פלסטיק, או רהיטים. לעולם אל תשתמש פולנית כי ריח כמו נפט או מכיל נגזרות נפט, כמו אלה יכולים לשבור את התקליטור.^[5]

Ad closed by Google

Report this ad

Why this ad?

פרסומת